


# Guardmaster/Guardmaster II

## Installation Instructions

Guardmaster and Guardmaster II Pressure Mounted Gate Installation Instructions

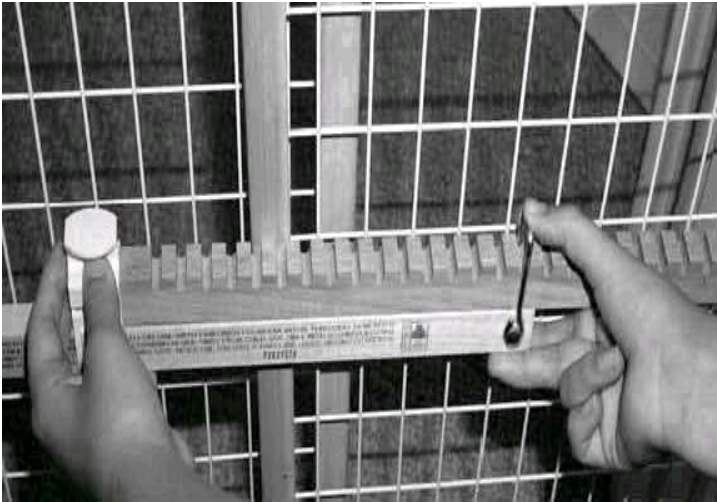

1. Facing the locking mechanism, lift the lock wire from the notched pressure bar and slide gate towards the open position until the rubber bumpers come in contact with the doorway or hallway surface (27" – 41")(68cm-104cm).



2. Align the lock wire with the notched bar in the vertical position, count four notches to left (toward plastic latch) and make a distinctive pencil mark on the notched bar.



3. Release plastic latch by pulling upward on finger grip.



4. Raise the notched bar up until the lock wire fits into a notch. Please mark this notch with a pencil. Push down on the notched pressure bar until the gate expands and applies pressure to doorway or hallway.



5. Please make sure that you have pushed the plastic latch down until it has locked firmly into place over the bottom pressure bar. Be sure that the gate is secure by giving the top a push/pull motion. The gate should feel tight in position. If the gate feels loose, release the plastic latch and advance the lock wire to the next notch on the pressure bar and repeat the locking procedure.

**If you have any additional questions, please call us at (877) 242-8392.**